

# AS NEW

## DESCALER

**AS NEW** is a highly active acid based cleanser formulated for periodic descaling of dishwashers and ice bank machines. **AS NEW** contains highly effective scale dissolving organic acids and fast penetrating wetting agents to ensure scale is quickly and safely removed from the inside of machines. Scale becomes dislodged and remains in solution or suspension, permitting complete removal when rinsing.

**AS NEW** is also designed to be used either manually or by recirculation techniques making it a versatile product for all machines where water scale occurs.

### FEATURES AND BENEFITS:

- Liquid formulation for easy dilution
- Powerful organic acid base to quickly attack scale
- Fast acting wetting agents to allow penetration of scale
- Effective detergent action permits manual cleaning of soil and grease from surfaces
- Will not harm stainless steel or plastic surfaces.
- Phosphate free formulation

Refer to Safety Data Sheet, for more information.

### TECHNICAL INFO



Suitable for use in food preparation areas.



Appearance - Clear Dark Green Liquid



Fragrance - Slight



Meets environmental standards



pH - 1.5 (100%)



Pack Sizes - 5lt drums



Shelf Life - 2 years

### DIRECTIONS FOR USE:

#### DISHWASHERS

It is recommended that you periodically check the Dishwasher for scale, usually every 1 to 3 months. If scale is found dishwasher must be emptied and cleaned in the following manner:

1. Remove drain plug and allow all water to drain.
2. Carefully inspect inside machine for food scraps, loose cutlery or broken glass. Remove and discard.
3. Turn off detergent dispenser (toggle switch on left side of or underneath dispenser). Insert drain plug and fill machine with water.
4. Add 1 litre of **AS NEW** to Upright Dishwasher or 2 litres of **AS NEW** to Conveyor Dishwasher and turn machine control to manual wash. Close doors and allow machine to wash for 15 minutes. If machine does not have manual wash run 7 x 120 second cycles.
5. Turn machine off and remove drain plug. Flush the inside of the machine by leaving drain plug out turning on to fill for 5 minutes.
6. Manually scrub wash inlet strainers, drain plug and strainer baskets, if necessary.
7. Reassemble machine, turn detergent dispenser on (toggle switch on left side of or underneath dispenser) and fill machine ready for regular operation.



The technical information/suggestions herein are believed to be reliable but since the conditions of use are beyond our control they are not to be construed as warranties. It is the purchasers responsibility to test and determine the suitability of a product for the purchasers intended use.



# AS NEW DESCALER

## DIRECTIONS FOR USE: Continued

### ICE BANK MACHINES

It is recommended that you periodically check the Ice Bank Machine for scale, usually every 1 to 3 months. If scale is found the machine must be emptied and cleaned in the following manner.

1. Turn off machine.
2. Empty all ice from machine.
3. Open drain valve and flush tank with warm water.
4. Close drain valve.
5. Mix 20ml of **AS NEW** in every 1 litre of warm water to be used for cleaning.
6. Apply liberally over all internal surfaces of empty machine tank.
7. Allow 1-5 minutes for product to penetrate scale and other soils.
8. Rub treated areas with a soft scourer or sponge, paying particular attention to corners and seams.
9. Open drain valve and allow any solution in tank to drain.
10. Rinse surfaces well with fresh water and allow to drain.
11. Wipe over internal surfaces with a wet sponge to remove any final residual chemical.
12. Give all internal surfaces a final light water rinse and allow to drain completely.
13. Close drain valve.
14. Switch on machine and allow to refill with ice.

Refer to Safety Data Sheet, for more information.

## TECHNICAL INFO



Suitable for use in food preparation areas.



Appearance - Clear Dark Green Liquid



Fragrance - Slight



Meets environmental standards



pH - 1.5 (100%)



Pack Sizes - 5lt drums



Shelf Life - 2 years



The technical information/suggestions herein are believed to be reliable but since the conditions of use are beyond our control they are not to be construed as warranties. It is the purchasers responsibility to test and determine the suitability of a product for the purchasers intended use.

